




WILLIAM ROBERTS
— VINTAGE —

ASSEMBLY INSTRUCTIONS

MUDROOM BENCH
MRB

MUDROOM BENCH ASSEMBLY INSTRUCTIONS

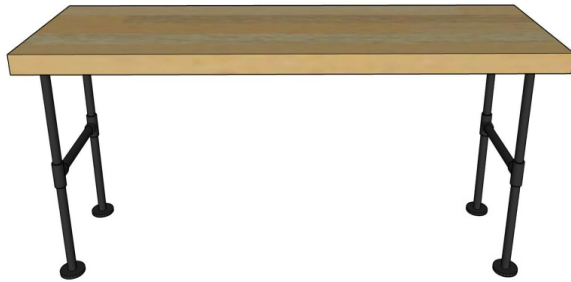


PARTS LIST



MUDROOM BENCH ASSEMBLY INSTRUCTIONS

STEP 1

HAND TIGHTEN THE CIRCLE FLANGE ONTO THE ENDS OF THE LONG VERTICAL PIPES.

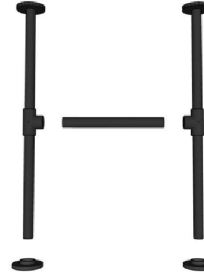

STEP 2

SCREW THE SMALL SINGLE PIPE INTO TEE FITTINGS AND ROTATE THE VERTICAL PIPES UNTIL SNUG. MAKE SURE THE LOOSE CIRCLE FLANGES ARE FACING THE SAME DIRECTION. ADJUST IF NEEDED BY TIGHTENING ONE OF THE VERTICAL PIPES HALF A ROTATION.

STEP 3

LAY THE COMPLETED PIPE BASE ON ITS SIDE AND MAKE SURE ALL 4 FLANGE FITTINGS TOUCH THE GROUND. ADJUST IF NEEDED BY SLIGHTLY TIGHTENING OR LOOSENING VERTICAL PIPES.

STEP 4

CHOOSE YOUR FAVORITE SIDE OF THE SHELF AND PLACE IT FACING DOWN ON THE GROUND THEN LAY THE SPACING TEMPLATE ON TWO END CORNERS OF THE SHELF.



STEP 5

PLACE THE COMPLETED PIPE BASE ONTO THE SHELF WITH THE LOOSE CIRCLE FLANGES FACING UP. USE THE SPACING TEMPLATE TO CENTER THE PIPE BASE AND ATTACH WITH THE PROVIDED SCREWS (DRILL RECOMMENDED).

STEP 6

FLIP THE BENCH OVER AND LEVEL IF NEEDED BY TIGHTENING OR LOOSENING THE CIRCLE FLANGES ON THE BOTTOM OF THE PIPE BASE.

WRV

**WILLIAM ROBERTS VINTAGE
10410 66TH STREET N UNIT #9
PINELLAS PARK, FL 33782**

INFO@WRVINTAGE.COM

MUDROOM BENCH

MRB

(727) 902-7890

WRVINTAGE.COM

WRV

**WILLIAM ROBERTS VINTAGE
10410 66TH STREET N UNIT #9
PINELLAS PARK, FL 33782**

INFO@WRVINTAGE.COM

MUDROOM BENCH

MRB

(727) 902-7890

WRVINTAGE.COM